

AMP-TWIST™ 6AS SL JACK: Dust Cover Replacement


1. PRODUCT DESCRIPTION

This document describes dust cover replacement procedure for AMP-TWIST™ 6AS SL Jack. Dust cover related: PN 1711691-X (where X indicates color).

2. REFERENCE DOCUMENTS


Customer Drawing (C-1711691) is available from the service network. The information contained in the customer drawing takes priority if there is any conflict with this specification or with any other technical documentation supplied by CommScope.

3. DUST COVER REPLACEMENT PROCESS

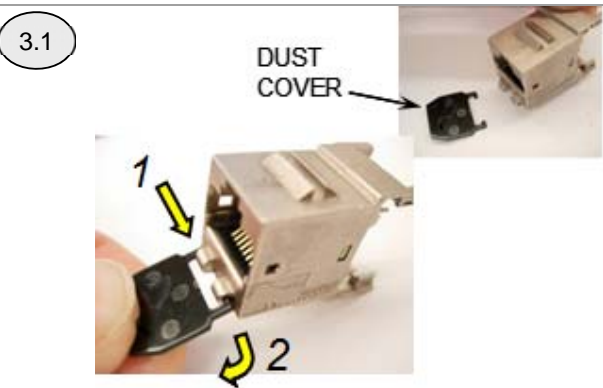


Disassembling the existing dust cover:

- Press one side against the hinge and pivot the other side while turning it toward the front.

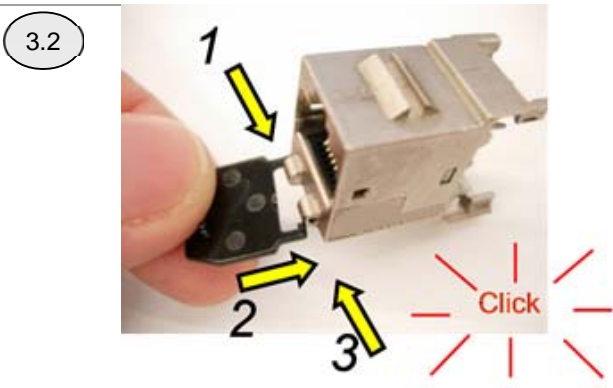

Assembling the new dust cover:

Place one side into the hinge and pivot the other side while pushing in.

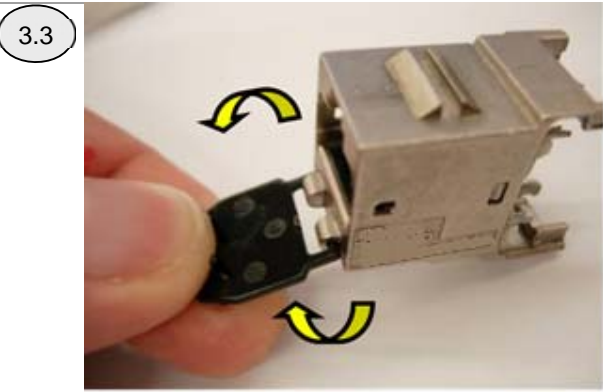

... Check both sides are fully inserted and the dust cover is functional and rotates...



It's already finished.

4. REVISION SUMMARY

Rebranded to CommScope.