



	A	В		\checkmark
			QUICK KNO for mounting stra	3 MOUNTING
2				
3	COMPLETED BRACKET ASSEMBLY SEE SHEET I			QUICK KNO SEE

QUICK KNOB INSTALLATION INSTRUCTIONS:

4

I. INSERT QUICK KNOB THROUGH BRACKET, ROTATE 90°, AND INTO T-SLOT IN FGS STRAIGHT SECTION. ROTATE QUICK KNOB CLOCKWISE SUCH THAT THE FLANGES EXTEND INTO T-SLOT. TIGHTEN KNOB. SEE DETAIL D.

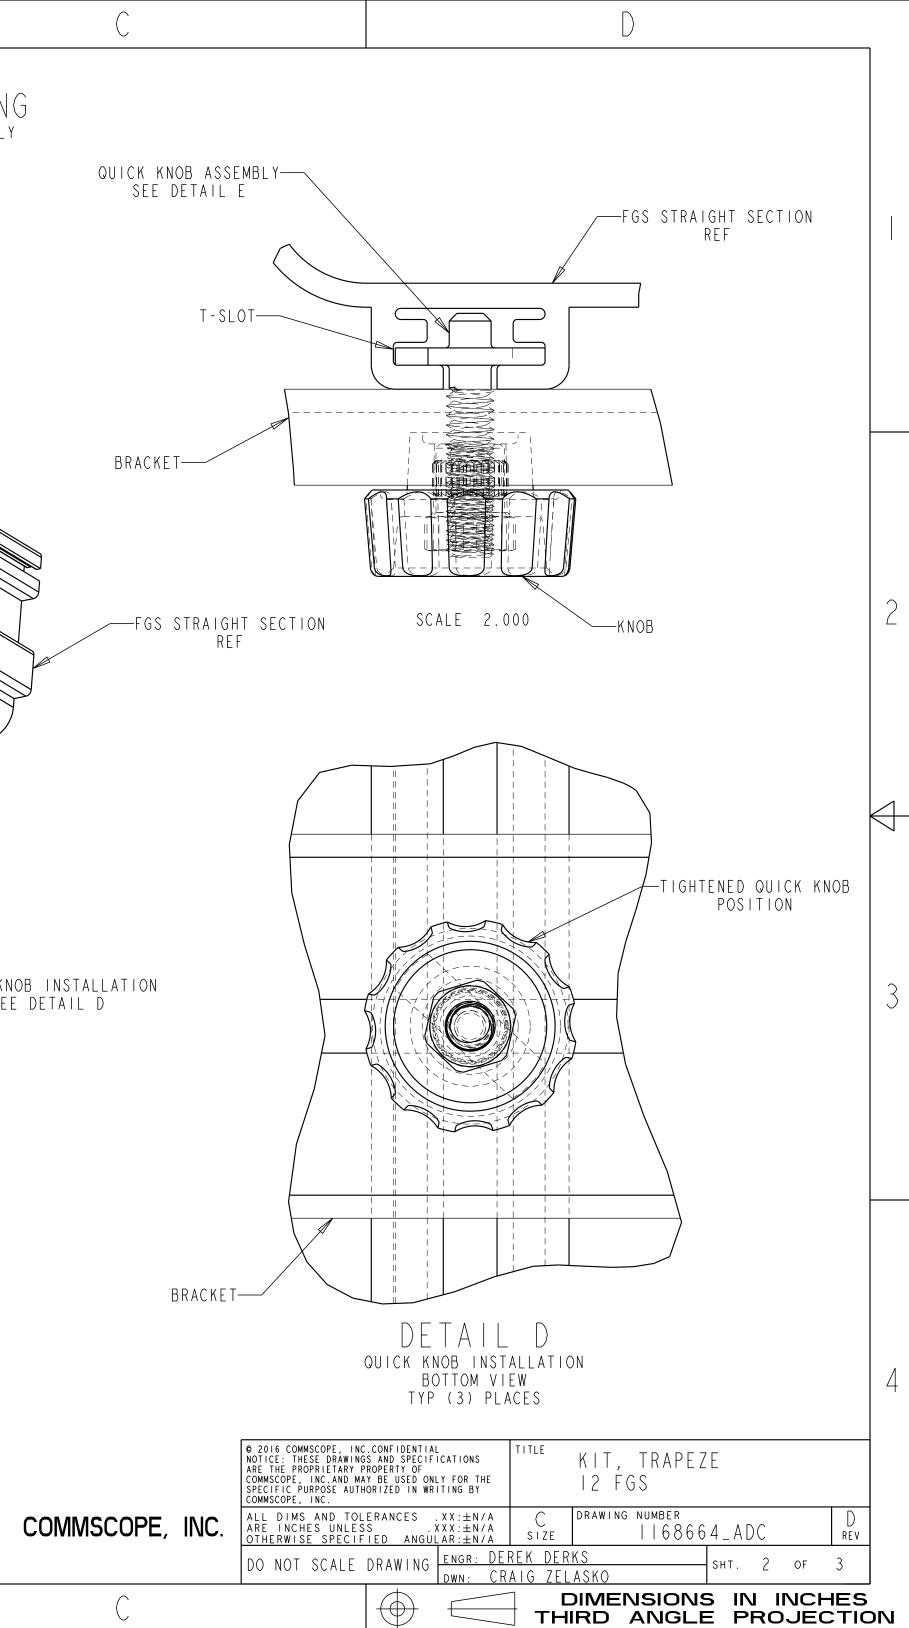

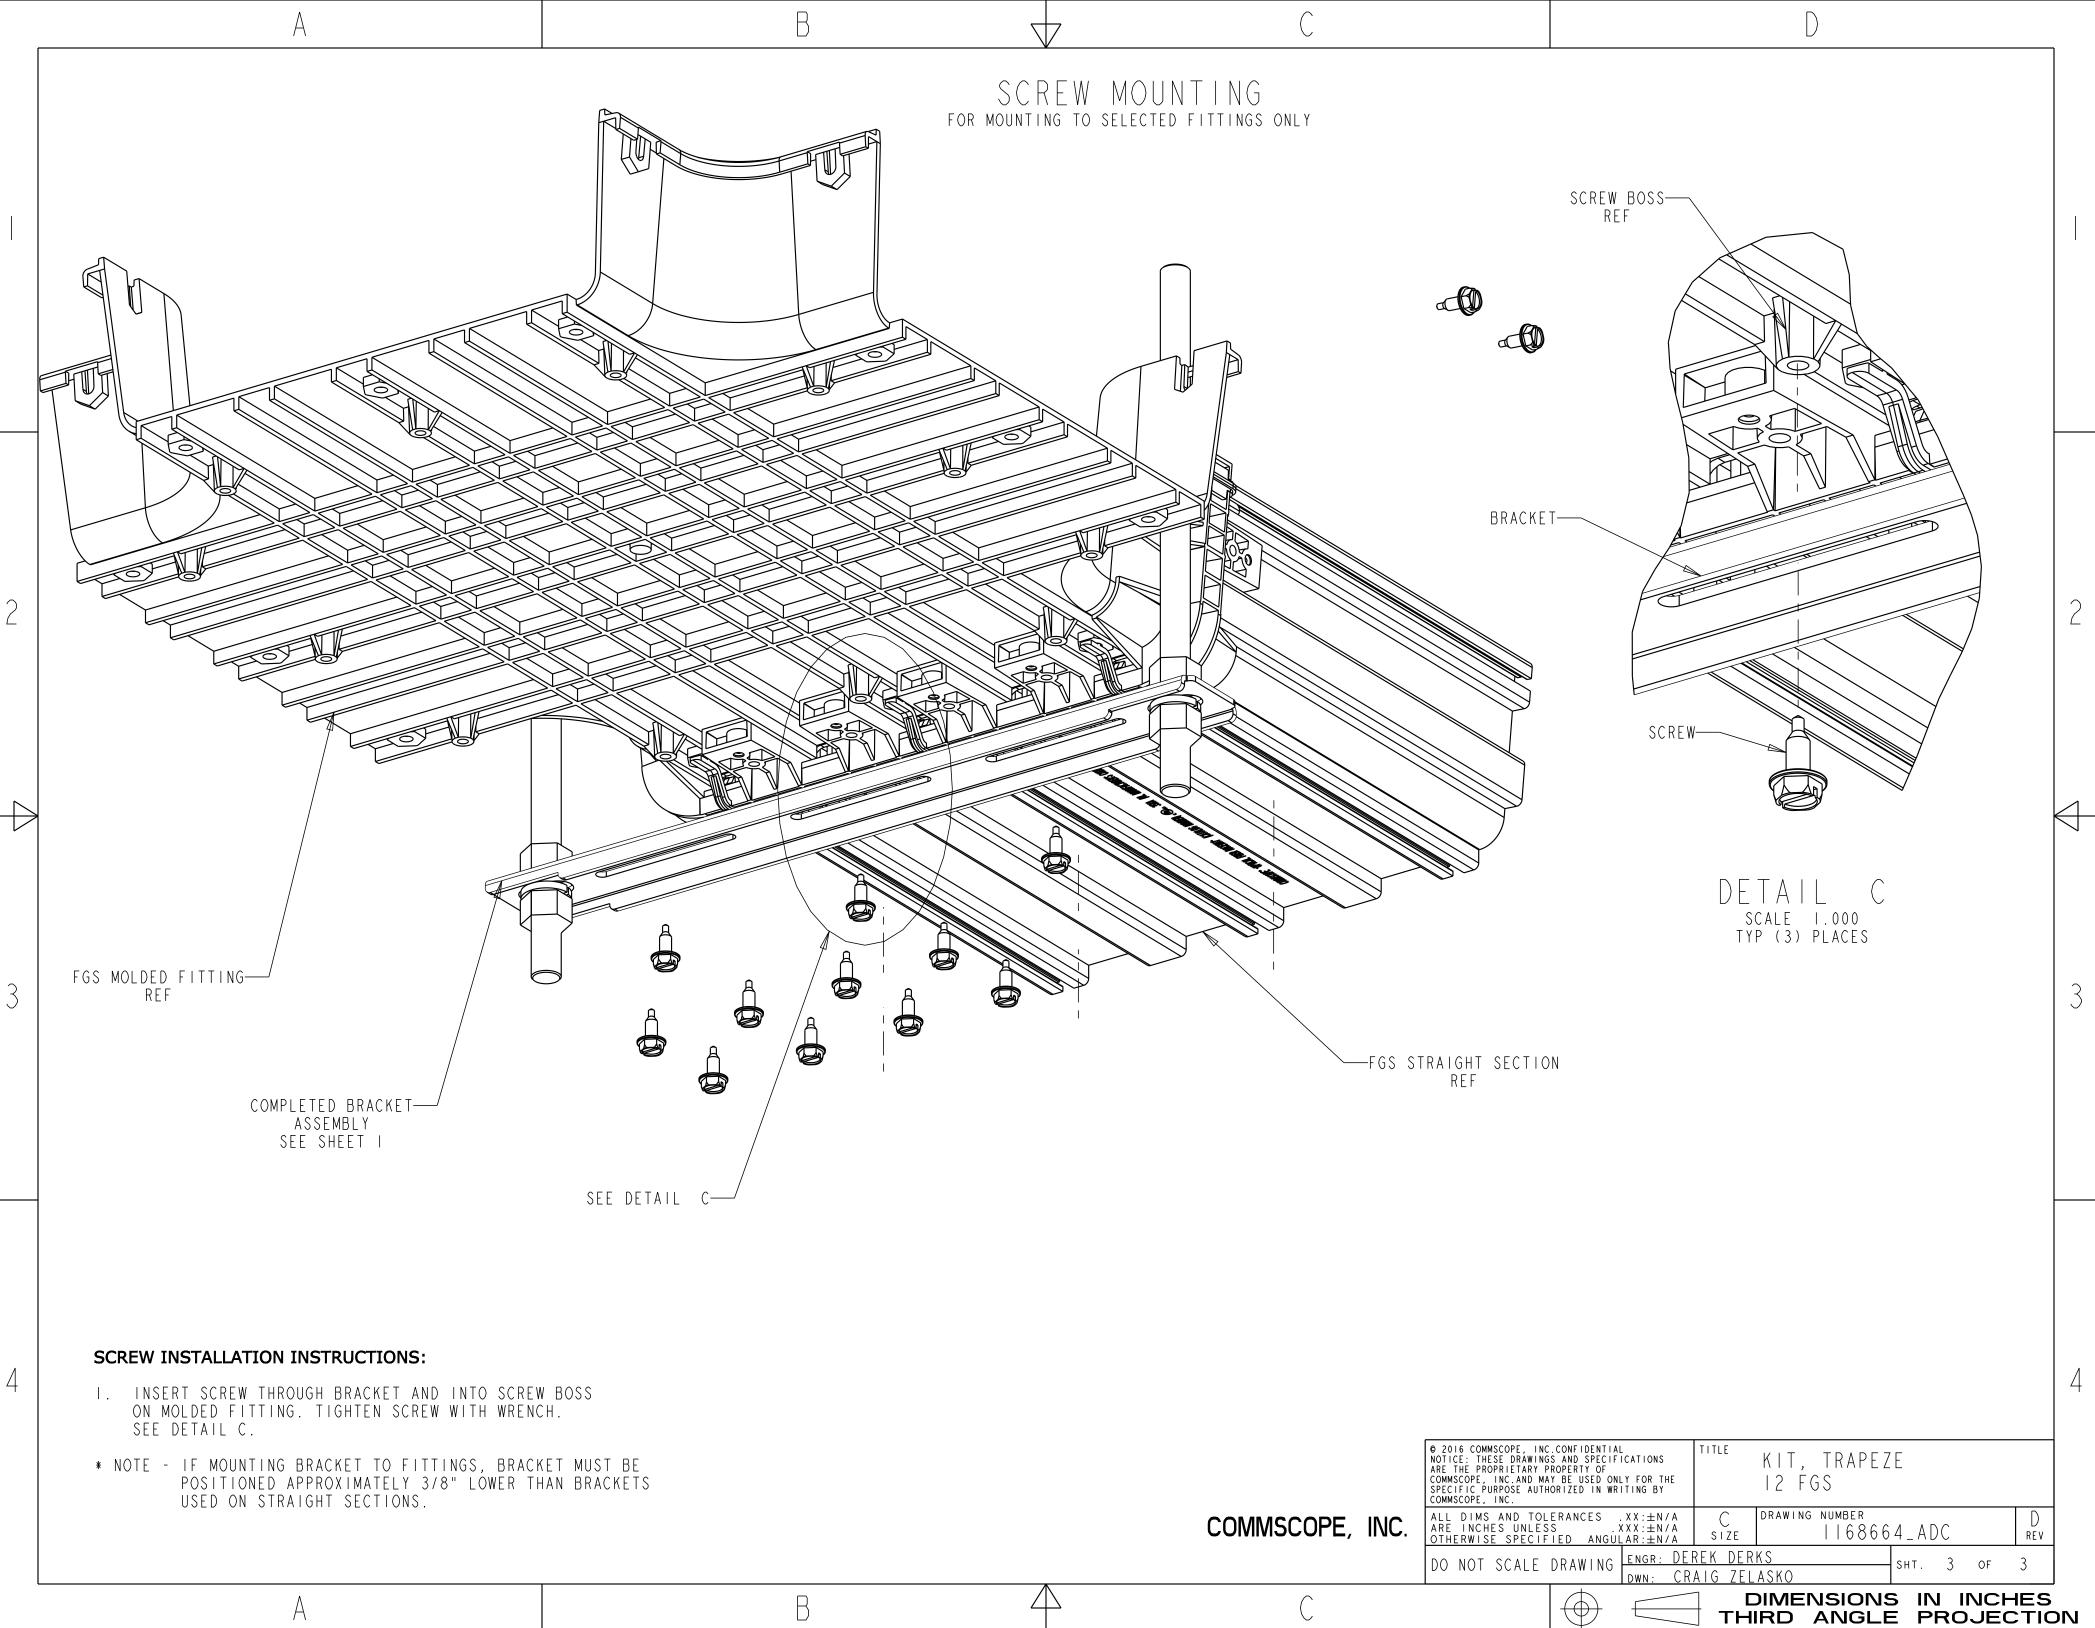

A	B	\square