

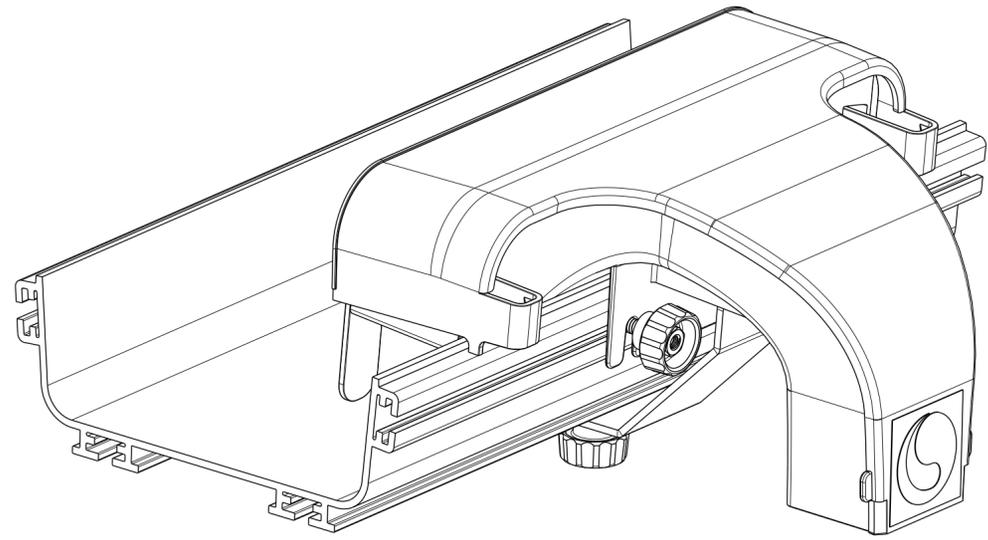



REVISIONS			
REV	CMO	DATE	APPROVED
F	40102336MCO	12-DEC-2019	ODVL
G	40167177CMO	25-JUL-2023	NRO

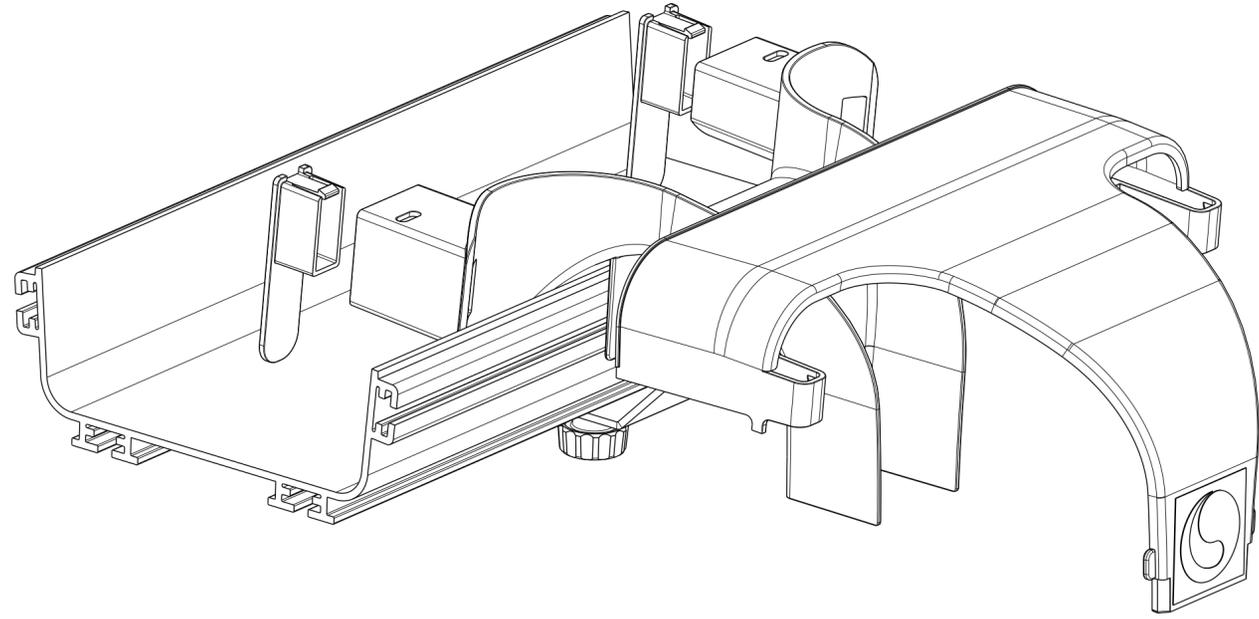

COVER ON VIEW
SCALE 0.500

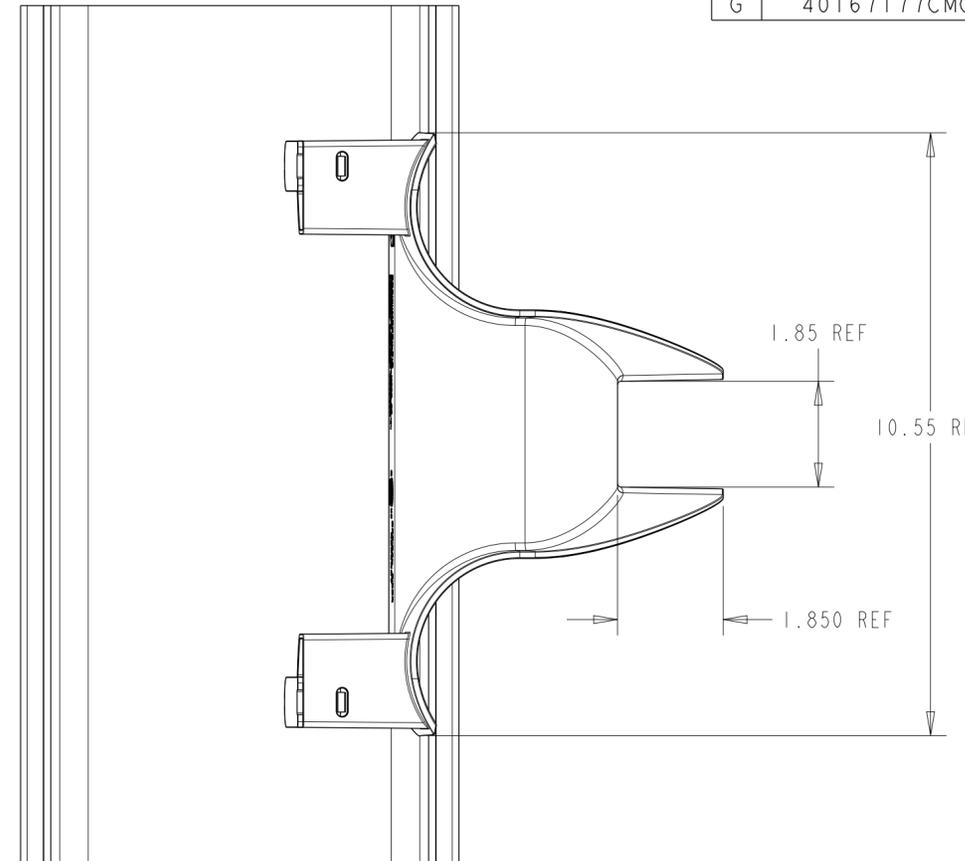

COVER OFF VIEW
SCALE 0.500


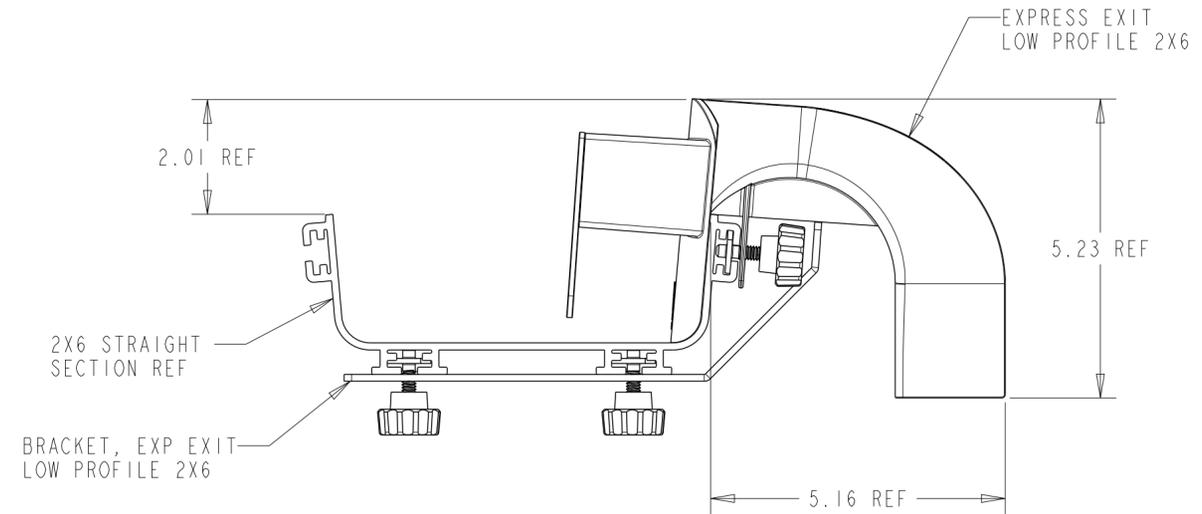


LOW PROFILE 2X6
ON TROUGH VIEW
SCALE 0.450

PARTS LIST	
DESCRIPTION	QTY
EXPRESS EXIT LOW PROFILE 2X6	1
COVER, EXPRESS EXIT LOW PROFILE 2X6	1
BRACKET, FIBER RETAINING	2
BRACKET, LOW PROFILE EXPRESS EXIT 2X6	1
QUICK KNOB ASSEMBLY	4

FGSB-MEXP-LP-G	BLACK
5 FGS-MEXP-LP-G-NC	YELLOW
FGS-MEXP-LP-G	YELLOW
CATALOG NO.	COLOR

COMMSCOPE, INC.			
DRAFTER OSCAR VALENZUELA	TITLE DWN SPT, EX EXIT LOW PROFILE, 2X6, FGS		
ENGINEER RUBEN ARVILLA	SIZE A2	SCALE 0.500	DOCUMENT NO. 1174568_ADC
CUSTOMER DRAWING			REVISION SHEET G 1 OF 2

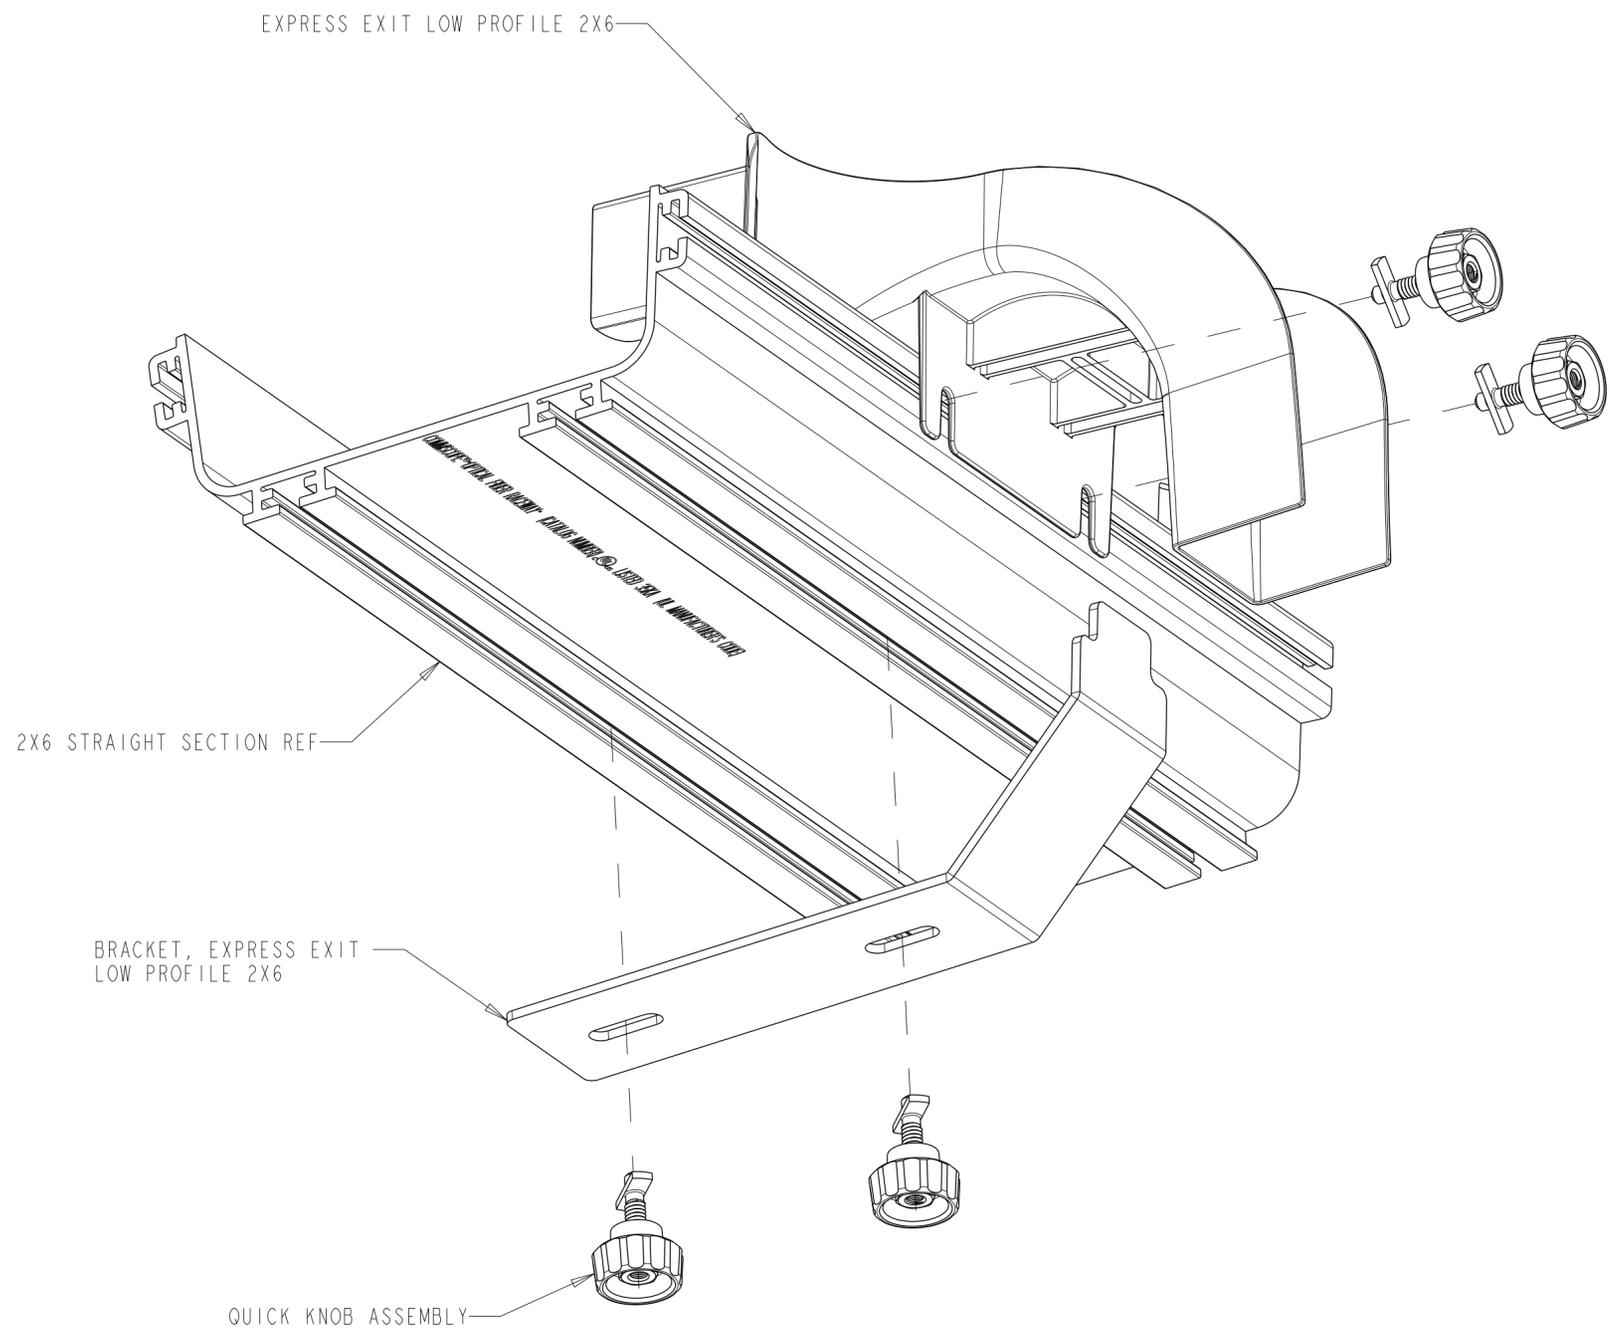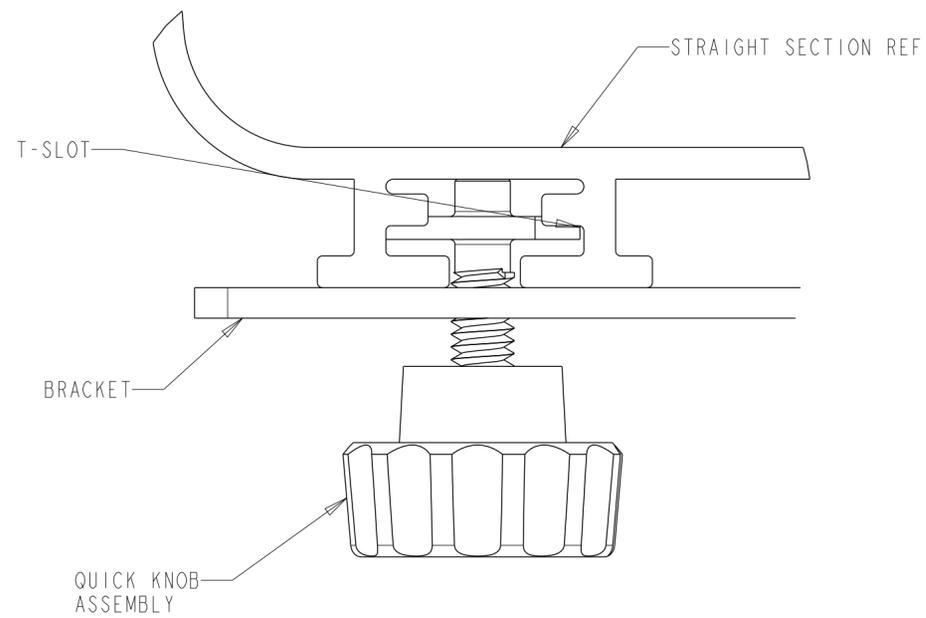

INSTALLATION INSTRUCTIONS:

1. PLACE LOW PROFILE EXPRESS EXIT ON STRAIGHT SECTION AS SHOWN.
2. LIFT ONE END OF LOW PROFILE EXPRESS EXIT AND INSTALL QUICK KNOBS INTO T-SLOT, LOWER EXPRESS EXIT ONTO STRAIGHT SECTION. REPEAT FOR OTHER SIDE. ROTATE QUICK KNOBS CLOCKWISE SUCH THAT T-BOLT FLANGES EXTEND INTO T-SLOT. LOOSELY HAND TIGHTEN QUICK KNOBS. SEE DETAIL A

*WARNING: IF LOW PROFILE EXPRESS EXIT IS REMOVED FROM STRAIGHT SECTION WHILE QUICK KNOBS ARE INSTALLED, QUICK KNOBS WILL FALL OUT.

3. INSERT QUICK KNOBS THROUGH BRACKET, ROTATE 90 AND INTO T-SLOT IN STRAIGHT SECTION WHILE INSERTING INTO SLOT ON THE LOW PROFILE EXPRESS EXIT. ROTATE QUICK KNOBS CLOCKWISE SUCH THAT T-BOLT FLANGES EXTEND INTO T-SLOT. SEE DETAIL A.
4. TIGHTEN (4) QUICK KNOBS COMPLETELY.

5 EXPRESS EXIT COVER IS NOT INCLUDED FOR THIS KIT.

EXPRESS EXIT LOW
PROFILE 2X6 INSTALLATION
2X6 STRAIGHT SECTION
SCALE 0.650

COMMSCOPE, INC.			
DRAFTER OSCAR VALENZUELA		TITLE DWNSPT, EX EXIT LOW PROFILE, 2X6, FGS	
ENGINEER RUBEN ARVILLA	SIZE A2	SCALE 1.000	DOCUMENT NO. 1174568_ADC
CUSTOMER DRAWING			REVISION G
			SHEET 2 OF 2